



OPERATING INSTRUCTIONS

1 RAISING YOUR BOAT

1. Position boat over lift and attach guide ropes to rear cleats of the boat.



2. Attach the hose pipes to the “UP” hose connectors on the Blower House (top four connectors)



3. Switch on all four blower switches
4. Once bubbles appears under all four float compartments, switch off all blowers
5. Ensure the minimum waterline stripe is above the water and the float remains stationary.

2 TO LAUNCH BOAT

1. Attach hose pipes to the “BOTTOM” attachments of Blower House (bottom four connectors)



2. Switch on all four blowers
3. Once the float have submerged under the “Minimum Waterline mark”, switch off blowers. (approx 10 seconds)

